Instructions Rear Trailing Arm Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

• Raise vehicle evenly and safely support.

Never rely on a Jack only.

Upper Arm

Bushing **91748**

Note - remove only 1 arm at a time

• Using a Press, press out the complete bushing including the steel outer shell.

• Use soapy water to push in new supplied bushings be sure to press with solid flat surface.

- Grease bushing internal diameter and side faces with supplied grease only.
- Re-fit arms to vehicle and check wheel alignment.
- Road test and re-check all bolts after 100kms

Application - Nissan Elgrand E50 - 1995-2002

Always refer complete catalogue listing

Contents - Bushing 91748 x2

- Bushing 91749 x2
- Steel tube 25.4x14x73.5 x2
- Steel tube 25.4x14x88.3 x2
- Grease

Grease bushing ID and side faces with supplied grease only



N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

Lower Arm