

# Fitting Instructions #TRC1015

## Nissan Patrol

### ***Radius arm kit to suit 2 & 3" (50 & 75mm) lift in GQ & GU Patrol & DA Maverick (Non ABS)***



**Revision: C**

**Date: 02/05/17**

**\*\*Please note, instructions are for NON ABS vehicles only\*\***

### **GQ Patrol & DA Maverick**

**Note: SPF0981K (bracket) and SPF0642-\_\_K (bush kit) will need to be purchased separately, taking note of sway bar diameter**

- Wheel-align the vehicle before the job is started and note settings;
- Recommend using a 4 post hoist or removing the arms while vehicle is on the ground, using a bottle jack, or similar, to stop the differential from twisting;
- Recommend removing drag link to enable arms to be removed and replaced;
- Remove old radius arms from vehicle one at a time, installing new arm before taking other arm off the car;
- Replace the old radius arm with TRC1015 arms from Superpro kit to the vehicle, pre assemble rear
  - RHD Vehicles
    - LHS
      - using 1 x SPF3467 assemble bush onto spigot as per figure 1;
      - assemble arm to vehicle, placing bolt through the 2 front bushes
      - ensure spigot is through bracket on vehicle, once assembled, use 1 x SPF3468 bush and OE washer and assemble onto the end of the spigot
      - Tighten up nut onto spigot
    - RHS
      - using 1 x SPF3468 assemble bush onto spigot as per figure 1;
      - assemble arm to vehicle, placing bolt through the 2 front bushes
      - ensure spigot is through bracket on vehicle, once assembled, use 1 x SPF3467 bush and OE washer and assemble onto the end of the spigot
      - Tighten up nut onto spigot

# Fitting Instructions #TRC1015

## Nissan Patrol

### ***Radius arm kit to suit 2 & 3" (50 & 75mm) lift in GU & GQ Patrol & DA Maverick (Non ABS)***

---



***Revision: C***

***Date: 02/05/17***

### **GU Patrol**

- Wheel-align the vehicle before the job is started and note settings;
- Recommend using a 4 post hoist or removing the arms while vehicle is on the ground, using a bottle jack, or similar, to stop the differential from twisting;
- Recommend removing drag link to enable arms to be removed and replaced;
- Remove old radius arms from vehicle one at a time, installing new arm before taking other arm off the car;
- Replace the old radius arm with TRC1015 arms from Superpro kit to the vehicle, pre assemble rear
  - RHD Vehicles
    - LHS
      - using 1 x SPF3467 assemble bush onto spigot as per figure 1;
      - assemble arm to vehicle, placing bolt through the 2 front bushes
      - ensure spigot is through bracket on vehicle, once assembled, use 1 x SPF3468 bush and OE washer and assemble onto the end of the spigot
      - Tighten up nut onto spigot
    - RHS
      - using 1 x SPF3468 assemble bush onto spigot as per figure 1;
      - assemble arm to vehicle, placing bolt through the 2 front bushes
      - ensure spigot is through bracket on vehicle, once assembled, use 1 x SPF3467 bush and OE washer and assemble onto the end of the spigot
      - Tighten up nut onto spigot

# Fitting Instructions #TRC1015

## Nissan Patrol

### Radius arm kit to suit 2 & 3" (50 & 75mm) lift in GU & GQ Patrol & DA Maverick (Non ABS)

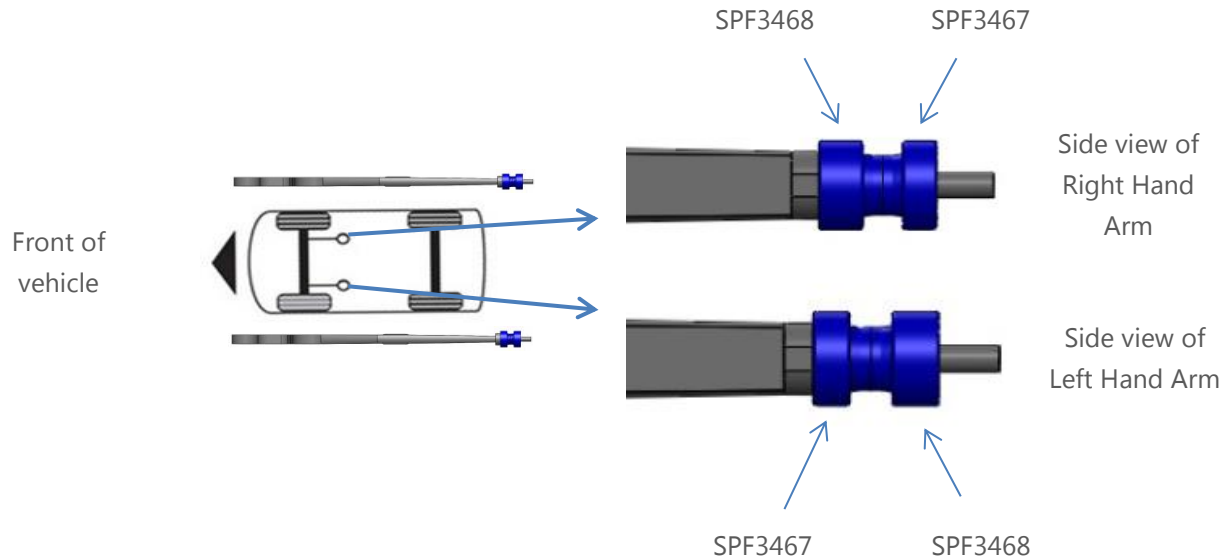


Figure 1

#### **GQ, GU Patrol & DA Maverick**

- Tighten front 4 bolts to 172 Nm;
- Re fit sway bar (with appropriate bushes and brackets) to arms;
- Install supplied sway bar links, TRC1285V (see TRCLINKIS) and link sway bar to body of vehicle **NOTE: OE sway bar link will not work.**
- Carry out wheel alignment;

#### **NOTE:**

- In our test vehicles we were able to achieve approx. 4° change in caster for a 2" (50mm) lift and 2.5° change in caster for 3" (75mm) lift